















All Rights Reserved - Measurements can change at any time

ALL MEASUREMENTS SHOWN ARE IN MM


Jambs (1)

Mullions (2)


Jambs (3)

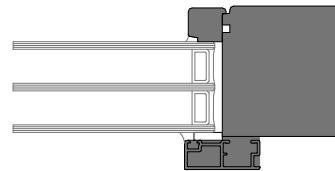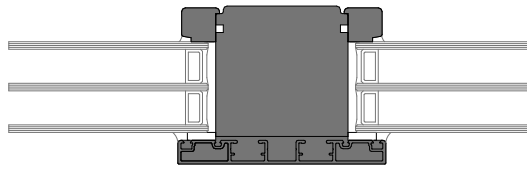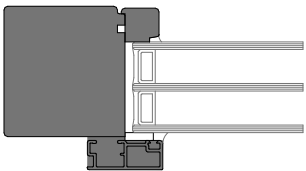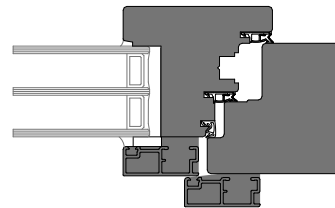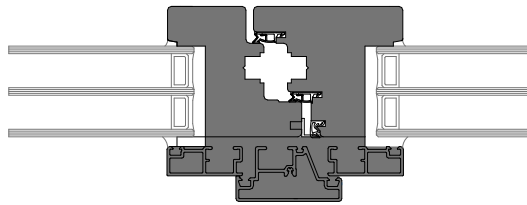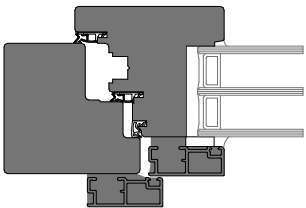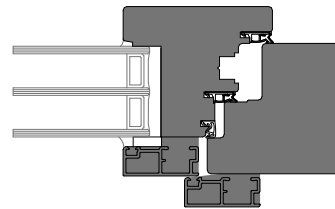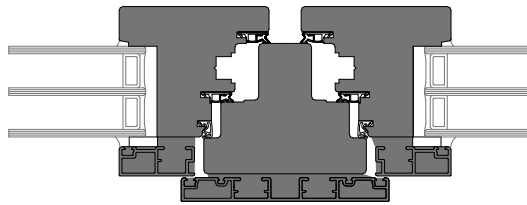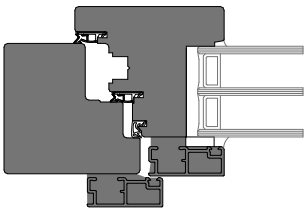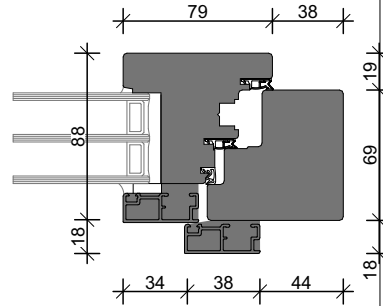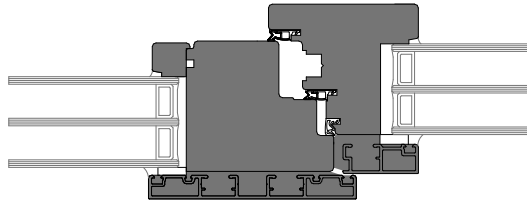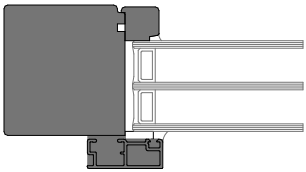

Elevations

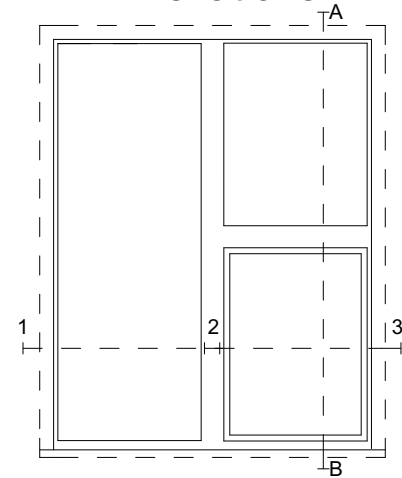

Exterior

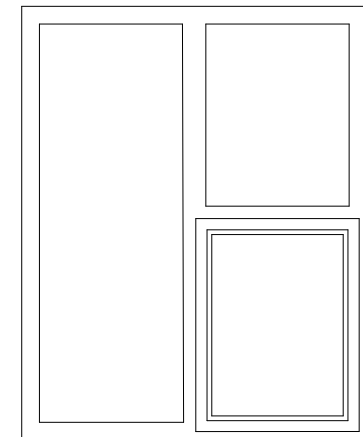

Interior



TANNER



Windows and Doors | Lauda Window | Section/Details | April 2015 | www.tannerwindows.com




All Rights Reserved - Measurements can change at any time

ALL MEASUREMENTS SHOWN ARE IN MM


Header (A)

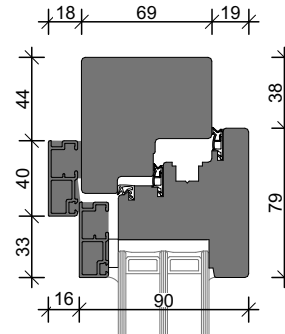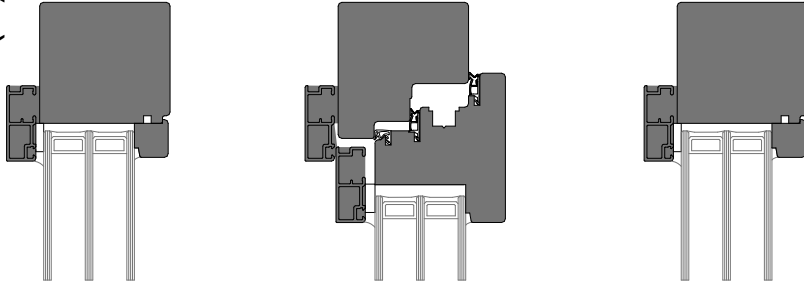


Transom

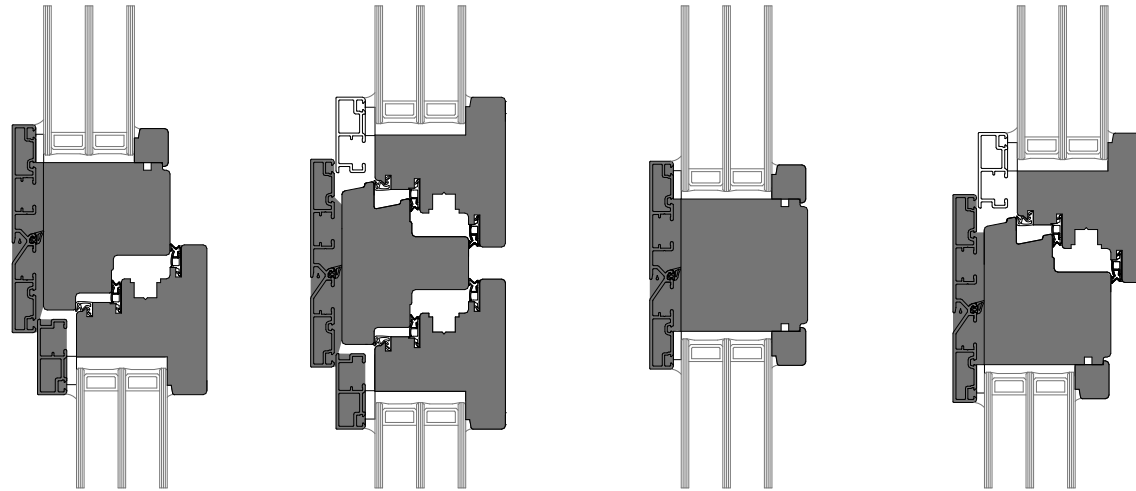


Sill (B)

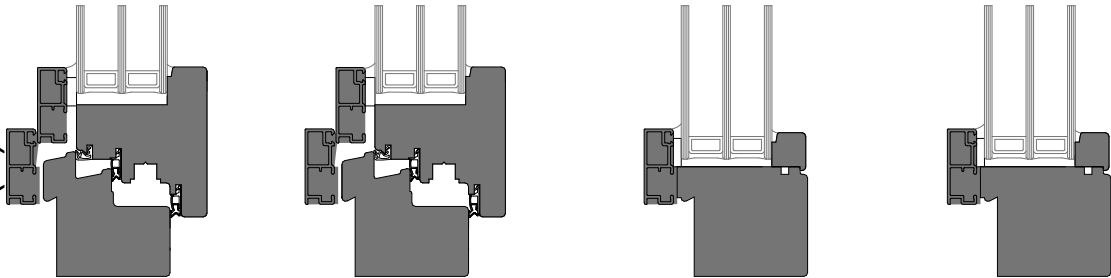


Elevations

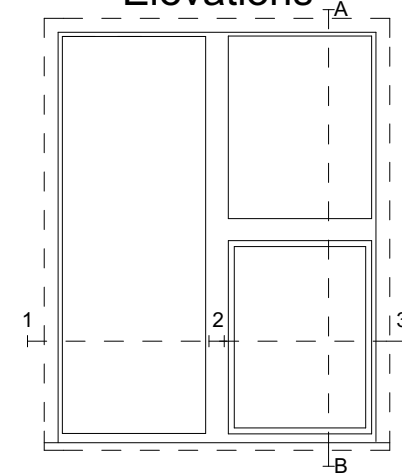

Exterior

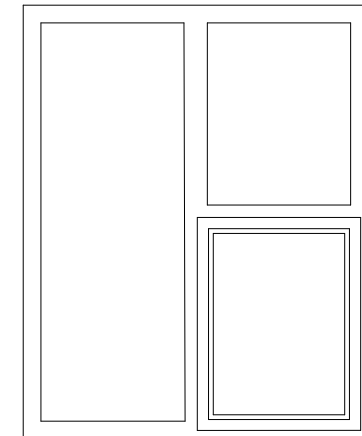

Interior



TANNER

Windows and Doors


Lauda French Door | Plan/Sections |

April 2015 | www.tannerwindows.com




All Rights Reserved - Measurements can change at any time



ALL MEASUREMENTS SHOWN ARE IN MM

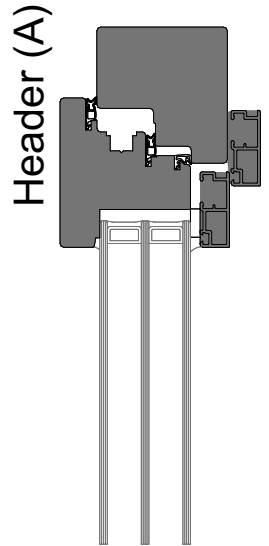


Header (A)

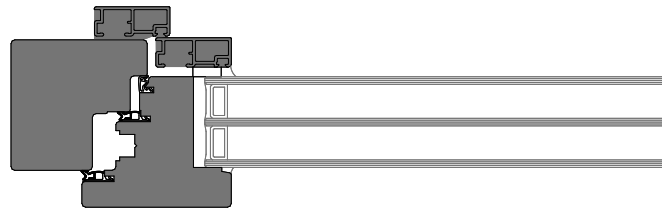

Standard French Door

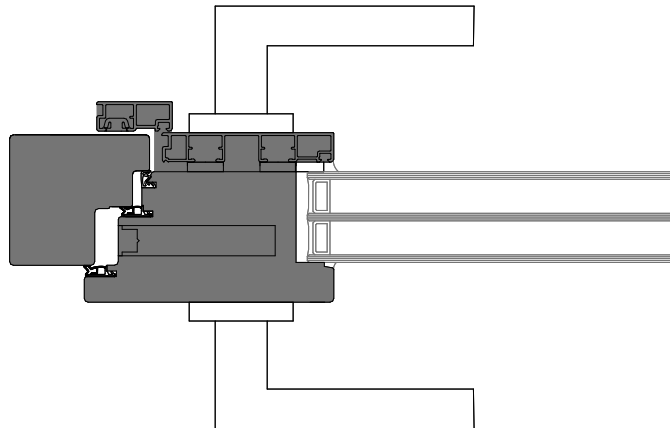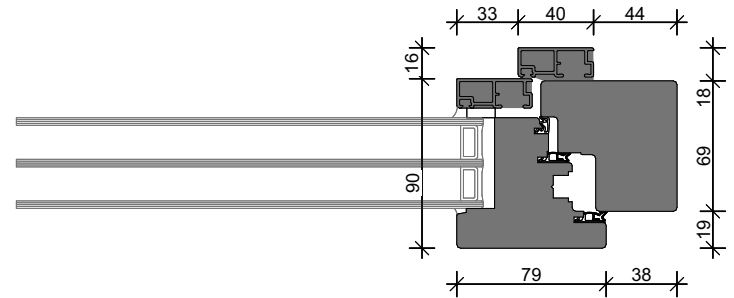

French Door with entry door hardware and lock

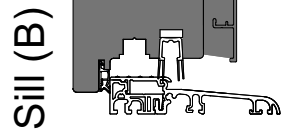

Sill (B)

